

(<https://camo.githubusercontent.com/22e40cc6c927bc0698540d0d80213fbb177d5a3a/687474703a2f2f7374617469632e656c6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323835322f353936356364303>)

Introduction

Thank you for your trust in us and for buying the new Energy eReader Max. We hope you enjoy it.

Your new e-book reader features a 6" E-Ink Carta touchscreen with anti-glare system to avoid glare and reflection while reading in the sunshine and from different viewing angles. Thanks to the Wi-Fi connection and Android operating system you will be able to open thousands of apps. All these features, the advanced reading settings and the 8 GB internal memory turn your device into the perfect partner for your reading sessions.

We strongly recommend to read this manual in order to familiarize yourself with your eReader before you start using it. It will only take a few minutes and it will help you to make the most of all its features.

Care and maintenance

- Keep your e-book reader clean and free of dust using a soft and dry cloth.
- Do not use neither corrosive nor abrasive cleaning products.
- Do not put too much pressure on the screen of the device.
- Do not expose your e-book reader to impacts, dust, direct sunlight, humidity or high temperatures for long periods of time.
- Do not remove the microSD card or turn off the device while reading or writing data in order not to lose information.
- Do not place your e-book reader near devices that generate strong electromagnetic fields since this can lead to damage or loss of data.
- Make backup copies regularly and save them on an external storage unit. Energy Sistem will not be responsible for any loss or damage to stored data.
- Do not leave your e-book reader completely discharged for a long time.
- Do not dismantle your e-book reader. All repair works should be carried out exclusively by qualified staff of Energy Sistem Technology, S.A.


Main features

- E-book reader with 6" E-Ink Carta screen. It features 16 grey levels and anti-glare system to avoid glare and reflection while reading in the sunshine and from different viewing angles.
- Designed to be a lightweight and ergonomic eReader. With side buttons that allow both left-handed and right-handed people to turn pages easily and comfortably.
- Touchscreen designed to enhance your experience with your e-book reader.
- Wi-Fi connection and Android 4.2.2 operating system to download applications from Google Play or access your contents stored in the cloud.
- Dual Core processor.
- 8 GB internal memory expandable by a further 64 GB via microSD/SDHC/SDXC cards.
- Rechargeable lithium battery that allows up to 6 weeks use on a single charge (based on half an hour daily reading time with Wi-Fi disabled).
- Advanced reading functions to change font and font size as well as to add bookmarks.
- It includes 1,500 classics of Universal literature.

Product content

- Energy eReader Max
- USB cable to charge the battery and transfer data
- Screen cleaning cloth
- Quick guide

General overview

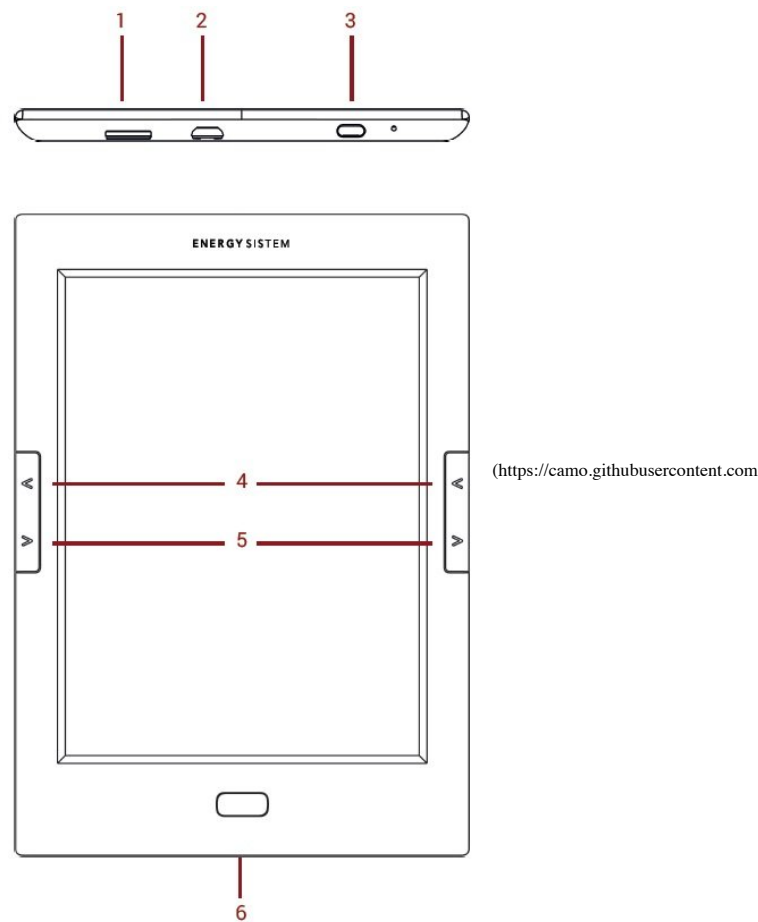

/bafecf0676bd65e270bf1f043ec21f7aa8956e0d

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353936333962303

1. MicroSD card slot
2. MicroUSB port
3. Power button
4. Previous page button
5. Next page button
6. Home button

Charging the device

Your Energy eReader Max has a rechargeable lithium-ion battery. Connect one end of the microUSB cable (included) to any charger with USB type A port or your computer and the other cable end to the microUSB port (2) that is to be found at the bottom of the device.

It takes between 3 and 5 hours to charge the battery depending on the type of charger you choose.

Memory expansion


Your Energy eReader Max has a 8 GB flash memory to store books and apps. If you want to expand the storage capacity, you can insert a microSD card up to 64 GB into the microSD slot (1) of your e-book reader.

Switching the eReader on and off

To turn on your eReader press and hold the power button (3) until the startup image appears. You will have to press the very same button to turn off the device. Press and hold this button until the shutdown menu appears on screen and select OK. You can also turn on the standby mode by pressing this button once. While the device is in this low-power mode, you will be able to return to the previous screen by pressing the same button again.


Main gestures

- Tap:
Touch the screen briefly

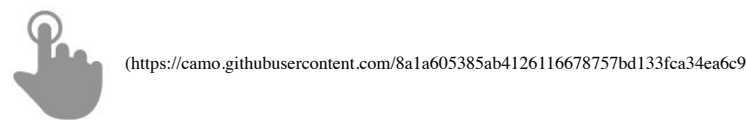

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393533302f353335353639623

- Press and hold:
Touch the screen for an extended period of time

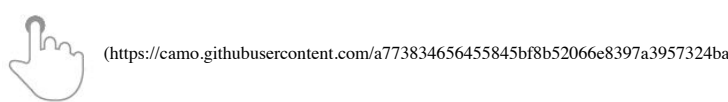

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393533302f353335353661656

 
- Zoom:
Pinch the screen with two fingers to zoom in or out



/123d08d94943648cf48946d49af9f88b12d17de1

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393533302f353335353661666

- Page turning:
Slide your finger quickly over the screen. You can also use the side buttons.



/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393533302f353335353661616

Main screen

- Recently read books



/b91b7ac325a5ea55a289113e195283c4cb12da24

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353936333736303

- Recently added books

Recently Added



(https://camo.githubusercontent.com/

/bf4e19fab21c2a4f36c300032e9b1641ddedabc1

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353936333735663

- Main apps icons: You will be able to set up the app shortcuts that you would like to see on the main screen by clicking on Settings, Other settings, desktop apps.



(https://camo.githubusercontent.com/

/614afb1bb53171d585390c8e62aa54d47b476a3f

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353639636430333

- Home:  (https://camo.githubusercontent.com/a2a48f77a82aa8c67a4e563bf159e5ee8f5d713


/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353639636430

You will return to the main screen.

- Back:  (https://camo.githubusercontent.com/40cf08b6bd817ca1ebdfc91d5d672e2f3cc393dd

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353639636430

This option allows you to go back to the previous screen shown by the application that is running.

- Sometimes, you will also find the icon of additional settings:  (https://camo.githubusercontent.com/

/3e8fcb78d44c0d97a24d0b7ff0d877c3f8b1ac3e

 
/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f35393633386

Press this icon to access the advanced settings.

- Wi-Fi:  (https://camo.githubusercontent.com/d5700833d35a1e768b2f4a6c03a1b2155482ecd4

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353639636430

This option shows the intensity of the Wi-Fi signal.

- Battery:  (https://camo.githubusercontent.com/1453f0f68b0bf359946d5158c7e760d5e9052899

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f35343939343


It shows that the battery level of your e-book reader.

- Hour: **10:12** (https://camo.githubusercontent.com/8d6bc54787340a3e2c21db893f68dae1dd6e3ba8

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f35343939343


Indica la hora actual.

Wi-Fi settings

Your Energy eReader Max has a Wi-Fi connection. In order to connect your device to a wireless network, you just have to go to 1 (http://static.energysystem.com/images/manuals/42535/569d0d8721035.jpg) Settings, 

(https://camo.githubusercontent.com/31075e812b3551581fc6e49565bd6ae8e9567dce


/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353639636431306

Wi-Fi and select ON  (https://camo.githubusercontent.com/

/047a8df1516928852d2baa7a1dbdce51a05d39af

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f353439393534373

The device will start then a search of all available networks and you will only have to select one of them to connect it.

-  (https://camo.githubusercontent.com/31075e812b3551581fc6e49565bd6ae8e9567dce

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f35363963643

Wi-Fi

- Select ON  (https://camo.githubusercontent.com/047a8df1516928852d2baa7a1dbdce51a05d39af

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f35343939353

- Select the network you want to connect to

Gmail:

(<https://camo.githubusercontent.com/da1fd26acc192a306d649a95ef9cb0cb3955a59>

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353661363361356

Gmail is the default e-mail client. This app allows you to access Google e-mail, as well as any other e-mail account with the correct settings. Note: In order to get to know your account settings, please ask your e-mail service provider.


Books:

(<https://camo.githubusercontent.com/ca10c01e996f4a13313ac553bbdb4035600cd4d3>

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353639643064373

Here you will be able to see all books stored on the internal memory or microSD card.

You can select the way in which books are displayed by pressing the view mode icon in the e-book explorer:

 (<https://camo.githubusercontent.com/b02a38195ae1e3769f4ecc8d2b89b15bd56c39bf>

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f353439393938373

 
list mode,  (<https://camo.githubusercontent.com/de6018cf123495885fe1a953f35daa7d5e0a6dc3>

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f353439393938383

thumbnail view 1 or  (<https://camo.githubusercontent.com/5973543e6f1cc1905a458bf1e1e5fccc7dc496a7>

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f353439393938393

thumbnail view 2 (preview of your e-book covers). Click on the chosen book cover to open the book you want to read.

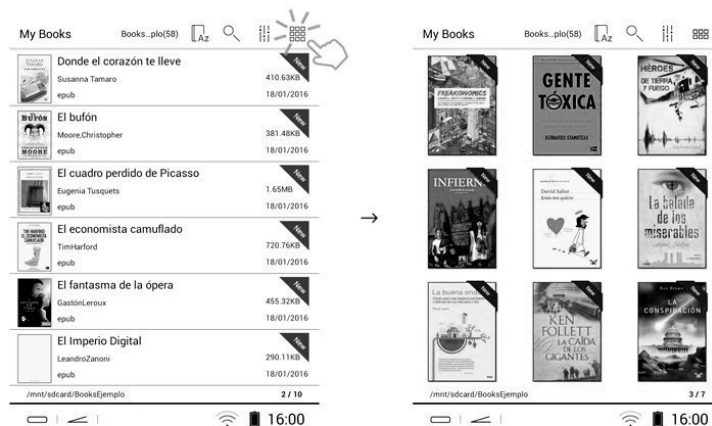


(<https://camo.githubusercontent.com/1cd7c57c827ffdc739c848392146abf0fe901c7b>

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353936333739313

Important: If the file has been saved on a microSD/SDHC card, it will be displayed in the list but it won't be possible to open it if the microSD/SDHC card has been removed.

Advanced reading functions

 There are several functions that you can use while reading a book. Press the centre of the page while you are in read mode to access the menu:

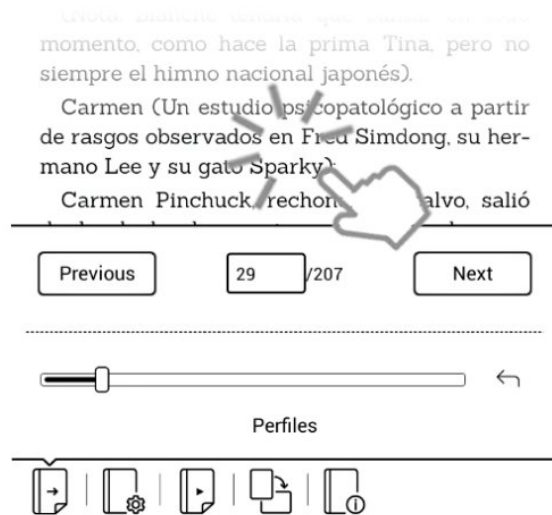



(<https://camo.githubusercontent.com/b809bd2477b86665a304fa0dfbab311efb242319>

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353661363438386

- Go to page:  (<https://camo.githubusercontent.com/4c4d6ce9d3b2eb1b303bbc167672efe4d11d70a8/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353661363438386>)
This option allows you to enter the exact page number that you want to see. You just have to click on the page number that appears to change it.
- Change font size:  (<https://camo.githubusercontent.com/36316403cd36c9cc753971454e1ebd8251b2b90c/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f3534393936386>)
There are two icons on screen to increase or decrease font size that you can press to get the font size that you want.
- Change font type:  Myriad Pro (<https://camo.githubusercontent.com/43c64059b1fb05dc837d00c75b8dc5f6070d677f/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f3534393936386>)
You can select the font that you prefer from the font list provided.
- Change line spacing:  1.0 (<https://camo.githubusercontent.com/c1356591bad036f90af572c1cba20eb7f40cfa02/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f3534393936386>)
This option allows you to choose the line spacing that you prefer in order to read comfortably.
- Change margins:  20 (<https://camo.githubusercontent.com/f5ac9c89f49ff9b723bbb6dc9cf94ffe8c87d1cf/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f3534393936386>)
This option allows you to choose the margins that you prefer in order to read comfortably.
- Turn page automatically:  (<https://camo.githubusercontent.com/06ecbdfc5c8a1d17a3f1273482bf5ca953858019/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353661363438386>)
In order to start this action, please enable the Autopage mode by pressing "ON". You can also set the time to turn the page in accordance with the reading speed that you prefer.
- Rotate screen:  (<https://camo.githubusercontent.com/dfad6fbb81e4c0950f75e0fdd237cf4fc1a3ce5e/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353661363438386>)
This option allows you to rotate the screen vertically and horizontally. You can choose the option that suits you best from the rotation options that appear.
- Information about the book:  (<https://camo.githubusercontent.com/6400da57820c26ce3e90629bd8e8d8e24ac57f1e/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353661363438386>)
This option allows you to see all the information about the book that you are reading. It may happen that not all book data are displayed or that only some of them appear. This depends on the publisher of the book.
- Add bookmark:  (<https://camo.githubusercontent.com/001fef7ced067673f6cf80e44f85f68b461c55a/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353661363438386>)
Add bookmarks to make your reading experience easier. Bookmarks are listed accordingly and you will be able to access them whenever you want.
- Settings menu:  (<https://camo.githubusercontent.com/3e8fcb78d44c0d97a24d0b7ff0d877c3f8b1ac3e/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f35393633386>)

This option allows you to open the menu to view, open or delete notes, bookmarks and comments.

- Open/ delete bookmarks:  (<https://camo.githubusercontent.com/d82367e1ba0b0b6ae7ff48400899f28503553cb8>)
/d82367e1ba0b0b6ae7ff48400899f28503553cb8
/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f35366136346f
Press the bookmark that you want to see to open it. Press and hold the bookmark that you want to delete and the delete option will appear.
- Word search:  (<https://camo.githubusercontent.com/5dd5f69b138da2cb093b5369f466456854dbbc8d>)
/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f35366136346f
You will be able to see where the word is and open that page with a simple tap.

Dictionary

 
Your Energy eReader Max has a function called "Dictionary" that allows you to install any database that supports StarDict format, one of the most extended electronic formats used for online dictionaries. These databases have been created with free GNU (GPL) tools.

You will be able to use both the dictionaries from renowned publishers and free dictionaries created by communities or even create your own dictionaries.

In order to be able to use the Dictionary app on your Energy eReader, you have to download the files of the dictionary you prefer to your computer first. Dictionaries that support StarDict format usually consist of 3 files in *.dz (o *.dict), *.idz (or *.idx) and *.ifo formats. You will need the three of them to use the dictionary. Please follow these easy steps to install them on your Energy eReader:

- 1. Connect your Energy eReader to your computer and access its internal memory using the file explorer in your computer.
- 2. Once you have opened the main or root folder, create a folder and call it "dict" (for instance, x:/dict/)
- 3. Copy the dictionaries in this folder or create subfolders with the names of the dictionaries that you want to add (Drae, Catalan-Spanish, etc...)
- 4. Once the installation is completed, restart your e-book reader.

Once the dictionaries are installed and you have restarted the e-book reader, you will be able to use this function while the device is in read mode by pressing for a few seconds the word that you would like and choosing Reference in the pop-up window.

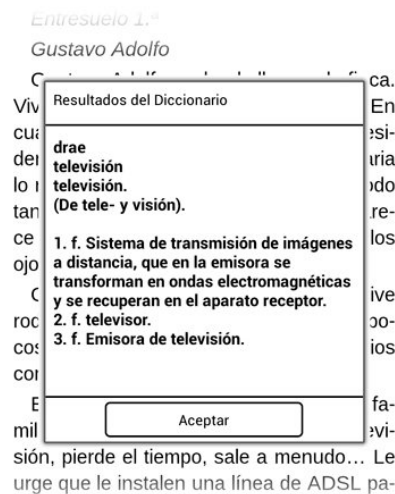

(<https://camo.githubusercontent.com/0000000000000000000000000000000000000000000000000000000000000000/68747470733a2f2f63616d6f2e6769746875626572636f6e74656e742e636f6d>)

/a24f25e03f9252bdf79ed5fd5b1571b2e834275a
/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f2f6d616e75616c732f34323533352f353661663936326

Note: The dictionary databases belong to third parties. Energy Sistem Technology, S.A. is not responsible for their content.

Notepad:

 


(<https://camo.githubusercontent.com/f41246c5666f8a9bce890947395686c0a9e67195>)

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323533352f353661363530336

This app allows you to note down all your comments or notes in order to check them and export them to other


device later on. You can also add notes by pressing for a few seconds the area where the text of your current book is and selecting Note.



/cd71ef761abf086f57cdcc479b89fe658e5a5669
/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f353439396133326

Updates

Your Energy eReader Max 3 has an Android based operating system that can be reinstalled or updated if necessary. Updates will be carried out via OTA (Over-The-Air) by default, so your Energy eReader will verify automatically if there are any updates available when it is connected to the Internet and will ask you to install them. You can also search for updates manually from the Settings menu.

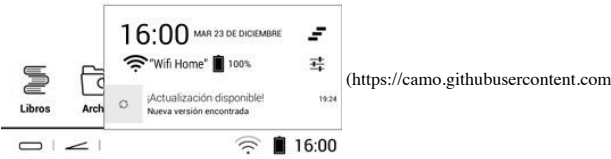

/8cdbcfa82a11041a58611e3cb54bb478b4447c66
/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f353439396133326



/1a8d036157a244538b19ad8c697d1020234868ab
/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f353439396133326



/19991b14a39f731f5a5b06cc3f42ce3a3f79bc8d
/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f353439396133326



/51ad080cf35a5505be5969a2f275b782c323ec7d
/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323039312f353439396133326

You can also update your device using your computer. The process is simple but has to be done only when is really necessary. Please follow these steps to install it:

1. Make sure that the battery of your Energy eReader is fully charged. If this is not the case, plug the charging cable into the adapter or USB port and wait until it is fully charged.
2. Open the web browser on your computer and type the following website: www.energysistem.com/en/support (<http://www.energysistem.com/en/support>)
3. Select eReader from the type of product list and the product model from the model list.
4. Download the latest firmware version available. **Important:** Please make sure the firmware version you are downloading is intended for your model and serial number. Otherwise, the device could be damaged.

5. Unzip the file on your computer.
6. Open the text file that you will find in the folder and follow the instructions to install the firmware on your Energy eReader.

Warranty

Energy Sistem Technology, S.A. is liable for any lack of conformity that exists at the time the goods are purchased during a period of 36 months. Batteries are excluded from the 36-month warranty, having a warranty period of 24 months.

This warranty covers any defects in workmanship or materials. This warranty does not cover any product failure due to accidents, misuse or alteration made by an unauthorized person.

The special 36 month warranty is valid for the European Union. For other countries please refer to the specific legislation or your local distributor.

Warranty and support

Visit the Support section at <http://www.energysistem.com/en/support> (<http://www.energysistem.com/en/support>) and select your product to view the FAQ (Frequently Asked Questions), user manuals, drivers and updates available. You will also have the possibility to submit a query to our Technical Support or manage the warranty.

You may also contact the distributor that sold the product by presenting the purchase receipt or invoice.

Important: we strongly recommend to send the product with an empty internal memory or to send it only with the original data. Information may be erased during repair works or you may not recover it if you get a new device in exchange for the faulty one.

Specifications are subject to change without notice.

Trademarks

All company, brand and product names are trademarks or registered trademarks of their respective companies.

© 2017 by Energy Sistem Technology, S.A. All rights reserved.

NOTE: The present device could contain links to other sites or websites operated by third parties not related to Energy Sistem Technology, S.A. These links are provided for your information or convenience; Energy Sistem is not responsible for their availability, content, update, adequacy or accuracy. These external web sites might contain link references to trademarks, patents, registered information, technologies, products, processes or rights property of other companies or individuals. All rights reserved are property of their respective owners.

Declaration of conformity



(<https://camo.githubusercontent.com/2c3928d2090780445e4c86bccf1fd523a25499d1>

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393035322f353438383763326

Issuer's name: Energy Sistem Technology, S.A. - CIF: A53107488

Address: C/ Calpe, 1 - 03509 Finestrat - Alicante (Spain)

Tel: + 34 966 813 257

We declare under our own exclusive responsibility that the product

Description: e-book reader

 
Brand: Energy Sistem
Model: Energy eReader Max
Manufacturer: Energy Sistem Technology, S.A.
Manufacturing Country: China

referred to in this declaration is in compliance with the essential norms and standards

EN 300 328 V2.1.1 (2016-11)
EN 301 489-1 V2.2.0 (2017-03)
EN 301 489-17 V3.2.0 (2017-03)
EN 55032:2015
EN 55024:2010+A1:2015
EN 61000-3-2:2014
EN 61000-3-3:2013
EN 62479:2010
EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013

in conformity with the essential norms and standards of the Directive 2014/53/EU of the European Parliament
and of the Council of April 16th 2014.

Finestrat, 01st August 2017.

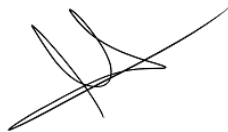

(<https://camo.githubusercontent.com/8445862592c4b9752851bb45645e078a08487f5b/687474703a2f2f374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323534372f3538366365333333>)

/8445862592c4b9752851bb45645e078a08487f5b

/687474703a2f2f374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323534372f3538366365333333

Marco Antonio Velázquez Fierro
Product Management Director